


SASM KIT STRIKE INSTALLATION

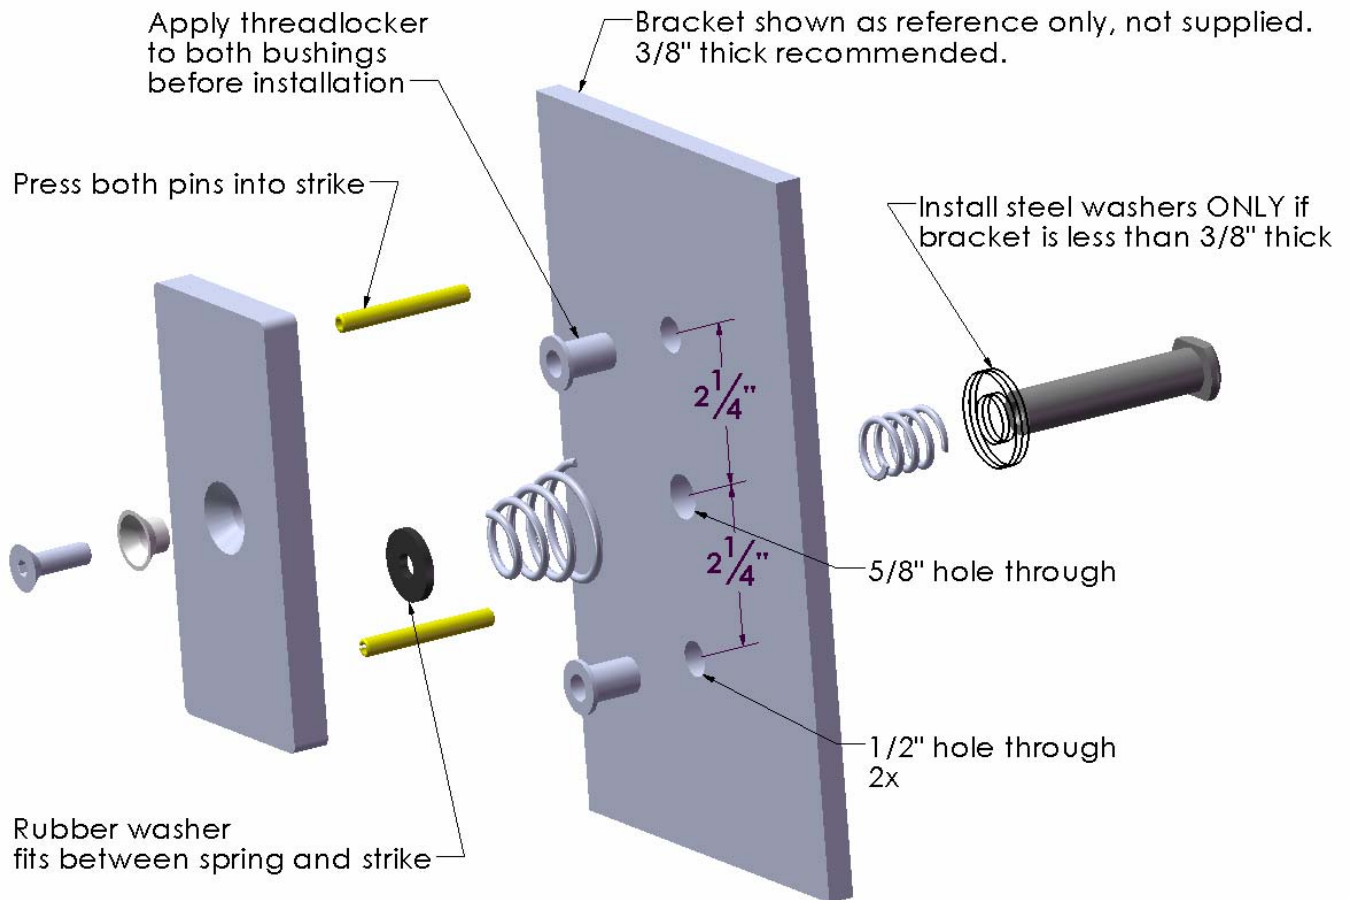

- The 1/2" holes are each spaced **2-1/4" FROM THE CENTER HOLE**
- The hard rubber washer is an electrical insulator used to keep the strike electrically isolated from the mounting framework and hardware. THE RUBBER WASHER MUST BE INSTALLED.
- Use a 3/4" open ended wrench to hold the suspension bolt while tightening the strike mounting screw.
- The rear mounted roll pins in the existing or new strike must be replaced with the included 2-1/4" long roll pins.

Patents

Securitron's Shock Absorbing Strike Mount Kit is patent pending.